



MAINTENANCE TIPS

TA-RivdomTwo BATTERY RIVETING TOOL

Here are some handy weekly maintenance tips to help with the investment you have made in your tooling, to ensure its best operating life and minimise valuable down time.

Before performing any maintenance, firstly remove the battery from the tool.

- ◆ **Nose Tip.** Check and tighten if necessary (13mm Spanner) the Nose Tip of the tool to ensure the tool jaws are opening correctly.
- ◆ **Clean Jaws.** Remove the nose tip holding cone (27mm Spanner). Remove the jaw holder and jaws (17mm & 17mm Spanner). Clean any deposits that may be in the nose tip holding cone, jaw holder, pusher and spring. Clean jaws with a rag and lube. Assemble in reverse.
Extra Tip: Try INOX or similar to clean away deposits because it also acts as a lubricant.
- ◆ **Battery & Charger.** Perform a visual inspection of the battery charger to ensure that neither it nor the cord is damaged. If damaged, disconnect from power immediately and tag with a **Do Not Operate** tag.
- ◆ **Installing Rivets.** When installing rivets, always ensure that the nose tip of the tool is flush with the flange of the rivet before the trigger is depressed. Failure to engage the flange of the rivet with the nose tip fully may result in broken Jaws.

Please Note: A protective visor & gloves must be worn when operating or maintaining this tool.

Always remember to empty the mandrel catcher regularly

Information provided is advice only and does not account for the specific circumstances of your tooling. If in doubt, always contact Profast before attempting any repairs

Profast Pty Ltd QLD	P: +61 7 3265 2267	F: +61 7 3265 2257	E: salesQLD@profast.com.au	W: www.profast.com.au
Profast WA Pty Ltd	P: +61 8 9456 5537	F: +61 8 9455 2659	E: salesWA@profast.com.au	W: www.profast.com.au